LAVA ANILOX ANILOX CLEANER BASIC 800-1200-1700

For Anilox Sleeves cleaning



The cleaning process takes place in the following steps

- Detergent cleaning
- Detergent discharge
- High pression rinsing
- Drying

The quick and gentle cleaning process leaves the anilox completely clean and ready for immediate use without causing any wear or breakage to the anilox. This system is also effective for high-line anilox.



ANILOX CLEANER BASIC 800-1200-1400-1700

Anilox, single or double, high pressure cleaning.

This machine has been designed to wash Sleeves and cylinders for narrow web.

- Structure made of painted steel, with height-adjustable level feet.
- Detergent incorporated tank, capacity 40 Lt, with manual emptying system
- 3 automatic washing programs
- Possibility of adjusting the speed of the trolley

Available in the following versions:

- 800 for washing 1 anilox / optional 2/4 anilox
- 1200 for washing 1 anilox / optional 2 anilox
- 1700 for washing 1 anilox / optional 2 anilox








NEW ANILOX CLEANER BASIC 800

Single or double wash high pressure anilox cleaner



FIRST STEP DETERGENT

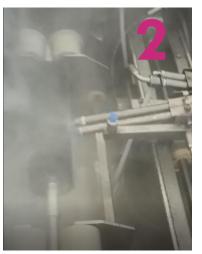

SECOND STEP HIGH PRESSION WATER



THIRD STEP ANILOX DRYING



Built-in removable recyclers

Enn.





- 40 It internal, heated, detergent recycler (standard)
- External7internal water recycler for Giuly Wash 800/1700 capacity 80 It with filtration (optional)



Compatible with any detergent



Detergent for washing anilox stained with ink

- ✓ Water
- ÚV VU
- ✓ Solvent

Anilox cleaner Basic 800




Anilox cleaner Basic 1200 - 1700





Built-in water recycler optional

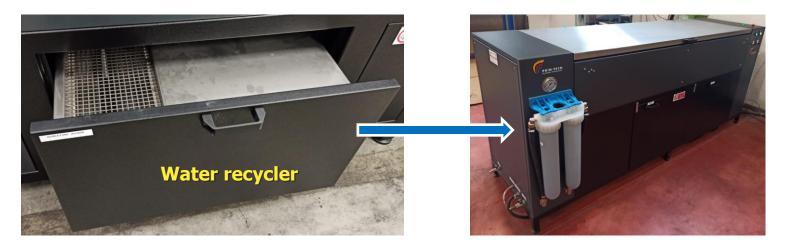



The machine can be equipped with a water filtration system that recirculates through a pump. The system allows you to extend the life cycle of the water, avoiding waste, with a limited use.





PLC easy electronic



This electronics is very simple for the operator, managed by a PLC with 3 automated programs

The forward speed is adjustable


The recirculation of the detergent is heated, the temperature is selectable.

Simple and intuitive to use, the operator presses the start button and starts a complete washing cycle.



Final results




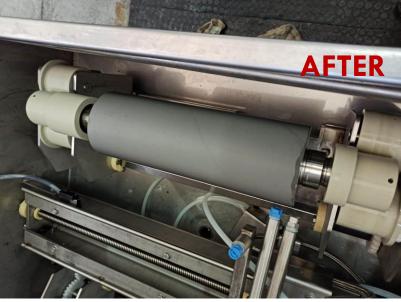



Final results



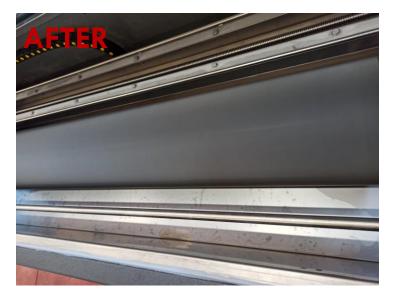



BEFORE





Optional



